

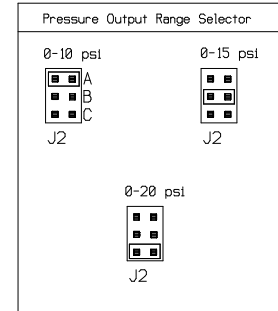


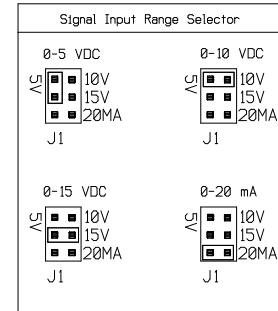

EPC2/EPC2LG/EPC2FS

Analog Current or Voltage to Modulated Pressure Output
Dual Valve (750 and 1400 scim) and Fail Safe

External 5 micron filter supplied with EPC2LG model in lieu of integral in barb filter.

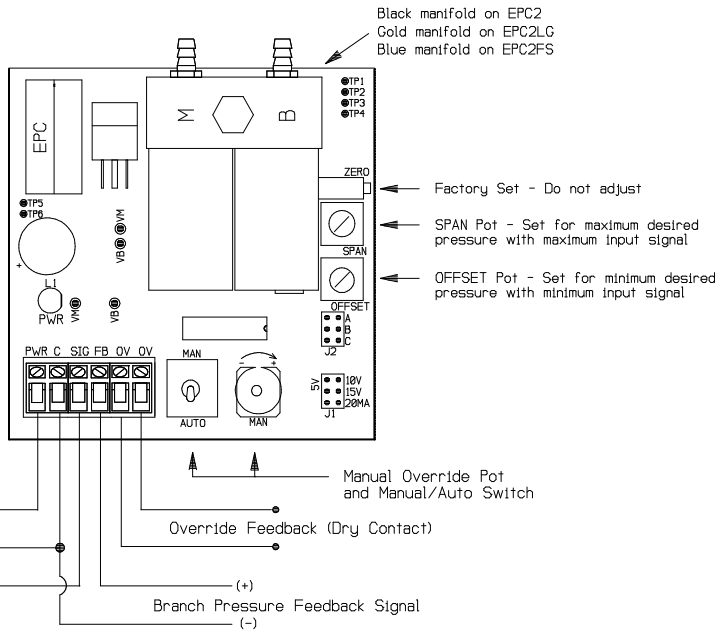

INSTALLATION

READ THESE INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION.

Ground yourself before touching board. Some components are static sensitive.

MOUNTING:

Circuit board may be mounted in any position. If circuit board slides out of snap track, a nonconductive "stop" may be required.

Use only fingers to remove board from snap track. Slide out of snap track or push against side of snap track and lift that side of the circuit board to remove. Do not flex board. Use no tools.

POWER CONNECTIONS:

- 1) **24 VDC** - with power off, connect 24 volt DC power supply to "PWR" (+) and "C" (-) or common terminals on the board.
24 VAC - with power off, connect one transformer secondary leg to "PWR" (+) and the other to "C" (-) or common terminals on the board.
- 2) **If the 24 volt AC power is shared** with devices that have coils such as relays, solenoids, or other inductors, each coil must have an MOV, AC Transorb, or other spike snubbing device across each of the shared coils. Without these snubbers, coils produce very large voltage spikes when de-energizing that can cause malfunction or destruction of electronic circuits.
- 3) **If the 24 volt DC power is shared** with devices that have coils such as relays, solenoids, or other inductors, each coil must have an MOV, DC Transorb, or a diode placed across the coil or inductor. The cathode or banded side of the diode (or DC Transorb) connects to the positive side of the power supply. *Do not power without main air supply provided.*
- 4) If you are not sure of other field device configuration, use separate transformers. It is highly suggested that the 24 VAC neutral of all transformers be earthed at the transformer. Analog input, digital input, and analog output circuits should not be earth grounded at two points. Any field device connected to this transformer must use the same common. If you are not sure of other field device configuration, use separate transformers.
- 5) You should measure the actual voltage output of the secondary. If the output is not fully loaded you may read a higher voltage than the circuit board can handle.



The gauge port will accept a miniature 1/8"-27 FNPT back-ported pressure gauge to allow direct reading of branch line pressure. The gauge should be sealed by teflon sealing tape, and should be tightened just snug, using a backup wrench to hold the manifold. **ADJUSTMENT OF INSTALLED GAUGES.** If installation requires adjustment of the gauge for proper reading of the face, turn the gauge no more than 1/2 turn in either direction. O rings in the bottom of the gauge port will allow this without leakage.

Warranty does not include malfunction due to clogged valve. Main air port on EPC2 is filtered with the supplied

80-100 micron integral-in-barb filter (Part # PN004). A 5 micron external in-line filter (Part #PN021) is supplied with the EPC2LG. Periodically check the filter for contamination and flow reduction. Replace if needed.

The surface between the manifold and pressure transducer is a pressure seal. Minimize stress between the circuit board and the manifold by holding the manifold in one hand while installing pneumatic tubing onto the fittings, and use care when removing tubing to avoid damaging fittings or moving manifold.

For optimum performance and reduced noise, the EPC2FS unit requires a branch air line capacity equal to at least 25 feet of 1/4" O.D. polyethylene tubing to operate without oscillation, and the EPC2 and EPC2LG unit require a branch air line capacity equal to at least 15 feet of 1/4" O.D. polyethylene tubing to operate without oscillation.

CHECKOUT

Select one of the four input signal combinations by moving the jumper shunt J1 identified as "Input Signal Range Selector". Select a preset pressure output range by moving jumper shunt J2 identified as "Pressure Output Range Selector", or set custom range as described below.

Verify the MAN/AUTO switch is in the AUTO position. In AUTO, the manual override pot is inactive, the override contacts are open, and the analog input signal is supplying the set-point. The offset pot may be adjusted to any desired offset between 0 and 14 psig. When in the MAN position, the override contacts are closed, the offset pot is inactive and the manual override pot is supplying the set point (the analog input signal is locked out). Supply power and the LED power indicator will light, but only measurement will verify proper voltage

1. Setting the minimum pressure. Make sure the signal connections are made and input is at minimum. Place the manual override switch to the AUTO position. Adjust the OFFSET pot to the desired pressure output, or until the actuator just starts to move. The adjustment range of the OFFSET pot is 0 to 9 psig (62.05 kPa), 0 to 14 psig (96.53 kPa), or 0 to 19 psig (131kPa) depending on range selected. Zero pot is factory set - do not adjust.

2. Setting the maximum pressure. Now place the manual override switch to the MAN position. Turn the MANual pot to produce the maximum branch line pressure available. Turn the SPAN pot for the maximum desired output pressure, or until the actuator just stops. **Be sure the MAIN air pressure is at least 2 psig greater than the desired maximum branch output pressure.**

3. Repeat. Because the OFFSET and SPAN pots are slightly interactive, steps 1 and 2 must be repeated until the desired minimum and maximum pressures are repeatable. Since the MANual pot is set for maximum pressure, it is only required that you switch the manual override switch back and forth from MAN to AUTO when repeating steps 1 and 2. Calibration is usually accomplished in less than 3 iterations. Apply minimum and maximum input signals and measure response. Response between the minimum and maximum values will be linear, therefore software algorithms are easy to derive.

The feedback signal range on all selections is 0-5 VDC and is proportional to the output pressure range selected.

The output and feedback signal will continue to vary proportionally if the input signal is increased beyond its upper limit (if enough main air pressure is available).

The EPC2, EPC2LG and EPC2GFS incorporate two valves and are not constant bleed controllers. Branch exhaust flow and response time is not limited by any internal restrictor and is similar to the load rate. The EPC2 and EPC2LG are ideal for long branch line runs and multiple actuators because of their capacity (EPC2 - 750 scim/EPC2LG - 1400 scim).

Note: If power to the EPC2 or EPC2LG is lost, the branch line control valve will close and branch line pressure will be maintained (assuming no branch line leaks).

If power to the EPC2FS (Fail-Safe) is lost, the branch line 3-way valve will exhaust branch line pressure to 0 psig (0 kPa).

Power Supply Voltage:	Air Supply:
24 VDC (+10%/-5%)	Maximum 25 psig 172.38 kPa), minimum 18 psig (124.11 kPa)
24 VAC (+/-10%) 50/60 Hz at terminals	main air supply, 0-10 psig (68.95 kPa), 0-15 psig (103.43 kPa), and
Supply Current:	0-20 psig (137.9 kPa) jumper selectable output pressure ranges.
180 mA max. (200 mA max. for EPC2FS)	EPC2 Air Flow, @ 20 psig (137.9 kPa) main/15 psig (103.43 kPa)
Feedback Signal Output:	Out, 750 scim
Factory Calibrated 0-5 VDC = range selected	EPC2LG Air Flow, @ 20 psig (137.9 kPa) main/15 psig (103.43
Input Signal Ranges:	kPa) Out, 1400 scim
0-5 VDC@ Infinite ohms	Exhaust rate: EPC2/EPC2FS - 750 scim, EPC2LG - 1400 scim
0-10 VDC@ Infinite ohms	Accuracy: 1% full scale at room temperature, 2% full
0-10 VDC@ Infinite ohms	scale @ 32 to 120°F (0 to 48.8°C)
0-20 mA @ 250 ohms	Override Contact Rating: 24 VAC or 24 VDC, 1 A maximum